



## MopScoop<sup>2</sup> – the solution<sup>2</sup>

The safest dosing and impregnation system  
for cleaning and disinfection  
in the healthcare sector

**PPS**  
PFENNIG PROFI SYSTEM

# Maximum safety in hospital cleaning




## Dosing and impregnation system MopScoop<sup>2</sup> – the solution<sup>2</sup>

Hygienically safe, contamination-free and ergonomic at the same time?

The innovative cleaning method MopScoop<sup>2</sup> for precise just-in-time impregnation of mop covers transfers the preparation directly to the cleaning trolley: Thanks to two separate dosing units, the mop covers can be impregnated with a predefined amount of liquid (250, 350 or 400 ml) directly at the system trolley – as required, in a closed system, and safe.

The new dosing system enables user-independent cleaning and disinfection results, and offers maximum flexibility and safety for all areas of application and requirements. User-friendliness and protection of employees' health are at the centre of the new cleaning method: no bending, no lifting, no physical effort – simplicity that motivates.

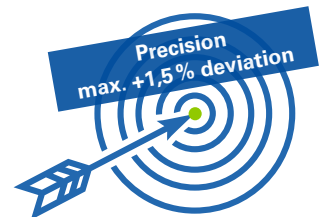

## One cleaning method – many benefits:

### HYGIENIC & SAFE

- Contamination-free operating concept
- Closed and lockable stored liquid: no contamination carry over into liquids, no spillage, no odor emission
- Duo or Mono: configuration with one or two completely separate, colour-coded dosing systems possible
- Developed under consideration of the Hygienic Design guidelines
- Easy to clean and hygienically safe to store
- Because mop covers are stored dry, there are no issues related to extended impregnation periods

### FLEXIBLE

- Dosing quantity can be individually adapted to specific requirements and areas of application: 250, 350, 400 ml (can be customised on request)
- Modular system: can be retrofitted on all Clino STE/C system trolleys
- Compatible with all common mop frames and mop covers

### RESOURCE-SAVING & ECONOMICAL

- Exactly defined dosing quantity per mop
  - Calculable total amount of liquid
  - Full consumption
- No excess solution, no wasting
- Time saving due to simultaneous dosing and impregnation
- Less washing: unused mop covers stay dry
- Longevity through the use of premium quality materials

### SIMPLE & SELF-EXPLANATORY

- Avoidance of potential sources of error: multiple immersion of mop covers in the cleaning liquid is impossible due to the system
- Simple operating concept increases motivation
- Consistent cleaning results due to predefined impregnation quantity
- Hang & Go: can be mounted quickly and without tools

### ERGONOMIC

- Ergonomics at the heart of the operating concept
- No physical effort, no bending and no lifting
- Promotes occupational safety and employee motivation thanks to user-oriented processes

**Cliно STEC7 SC Duo**

With disposal 2 x 70 L and MopDrop Protect with lid for mop frame magnet



## MopScoop<sup>2</sup> in detail – two separate systems

- Release lever operated with the elbow
- Lockable lid in 4-color system for identification of different liquids
- Container with dosing cylinder (max. 8 L) for flexible use of different dosing pistons (250, 350 or 400 ml cleaning solution)
- Clino system box for storing the dry mop covers
  - Touchless pick up of mop covers due to optimized shape
- Separate trays with operating levers for impregnation of the mop covers



Cleaning solution 1  
e.g. patient room

Cleaning solution 2  
e.g. sanitary area

## The safest method to clean floors


### The contamination-free workflow

Developed down to the smallest detail and with a focus on the user, the new dosing and impregnation system impresses with a self-explanatory workflow with a 0 % error rate:

- 1 Use mop frame to press down the operating lever in the tray.
- 2 Pick up dry mop cover from the Clino system box.
- 3 Operate release lever with your elbow. Predefined dosing quantity flows evenly through the dosing pipe into the tray.
- 4 Use mop frame to press down the operating lever in the tray and let the mop absorb the liquid. The system automatically doses the same amount for the next wiping process.
- 5 Perform wiping process and eject the mop without touching it.



Modular system  
Cliно R series made from recycled materials

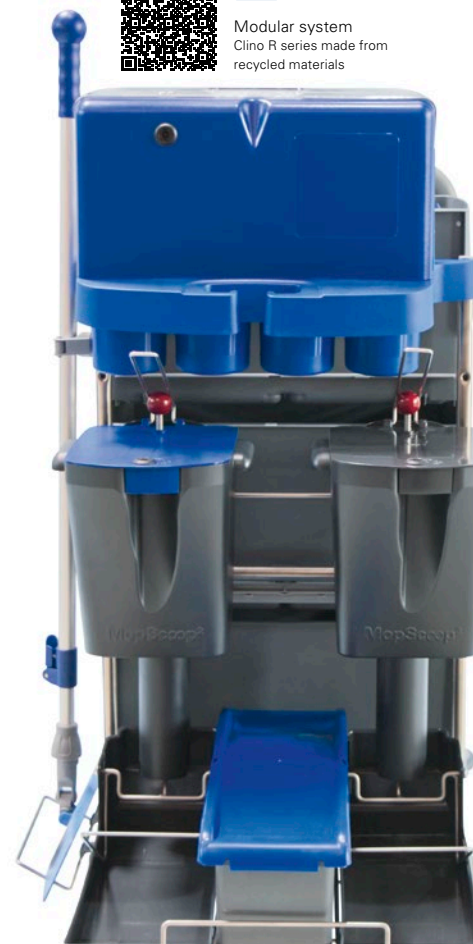

### Application video:

Hygienically safe working with the dosing and impregnation system MopScoop<sup>2</sup> – The workflow



Scan QR-Code



# Cleanliness lies in the system

Combine MopScoop<sup>2</sup> with the eco-friendly Clino R series

Parts made from  
**UPTO  
99%**  
recycled materials

**-20%**  
CO<sub>2</sub> in production



Pfennig Reinigungstechnik GmbH  
Heubachstr. 1  
D-87471 Durach  
E-Mail: [info@pps-pfennig.de](mailto:info@pps-pfennig.de)  
Phone: (+49) 831/561 220  
[www.pps-pfennig.de](http://www.pps-pfennig.de)